

# RUNGU® REAR MUDGUARD INSTALLATION

---

The Rungu Rear mudguard installs onto Rungu Dualie Standard and Rungu Juggernaut in lieu of a cargo rack to keep mud and water from striping your back while riding in wet conditions.



## Contents

Tools required .....	2
Preparing the mudguard .....	2
Adjusting seatpost grip .....	3
Adjusting the mudguard .....	4

## Tools required

- 3 mm wrench (for adjustment)

## Preparing the mudguard

The rear mudguard attaches to the seatpost. To prepare the mudguard, unlatch and open the grip.



## Adjusting seatpost grip

The mudguard should have a tight grip on the seatpost so it doesn't rotate side to side. To adjust the grip, open the grip and rotate the quick release lever clockwise to tighten and counterclockwise to loosen.



Repeat the process until you're satisfied with how the mud flap grips the seatpost.

## Adjusting the mudguard

Use a 3 mm wrench to loosen and re-tighten the pivot points to adjust the attitude (in the aeronautical sense) of the mudguard and height off the rear wheel so that it is 1"-2" above the rear tire. Rungu recommends tilting the mudguard toward to the front (clockwise) for better protection. Experiment with adjustments to find what works best for you.

