



Mesquite-proof Tire Liner Installation Guide

Step-by-Step Instructions for Protecting Your Tires

Introduction

Mesquiteproof tire liners are an excellent way to protect your bike tires from punctures caused by Mesquite Thorns. Proper installation ensures maximum protection and durability. This guide directs you to online videos that show you in real time, step-by-step how to install a liner for three tire/rim combinations.

Required Materials

Before you begin, gather the following items:

- Your bike tires (removed from the bike)
- Mesquiteproof tire liners (sized to match your tire dimensions)
- Tire levers
- A pump and valve adaptor (if needed)
- An inner tube (new or existing)

Preparation

1. ****Ensure Proper Fit:**** Verify that the mesquiteproof tire liners match the size of your tires. A 26x4.0-4.8 Liner fits tires of that size.


2. ****Inspect the Tires:**** Check your bike tires for any pre-existing damage, debris,

or sharp objects. Remove any foreign material to ensure a smooth installation.

3. ****Deflate the Tire:**** If the tires are still on the bike, deflate them completely and remove the tire from the rim using tire levers.

Installation Steps

1. Find which video combination of installation videos applies to your set-up. To do so
 - a. Measure the width of your rim. For 26x4.0-4.8 tires the rim should be between 80 and 110 mm as shown in the image below.

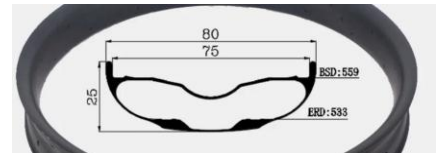

- b. Note the size of your tire. The tire size is embossed or printed on the sidewall of your tire – e.g. 26 x 4.0 in.
- c. Determine if you have a presta or schrader valve on your inner tube.





- d. Use the information you collected to determine which video tutorial applies to you.

Rim Size	Rim <100mm		Rim >= 100	
Valve type	Presta	Shrader	Presta	Shrader
26X4.0-4.5 Tire	Video 1	Videos 1 and 3	Video 1	Videos 1 and 3
26x4.5-4.8 Tire	Video 2	Videos 2 and 3	Video 3 and Video 2	Video 3

2. Scan the codes for the video tutorials that meet your requirements.

- a. Video 1



- b. Video 2



- c. Video 3



Conclusion

If you have any questions, contact support@mesquiteproof.com or call 949-205-7854 and connect with Support